
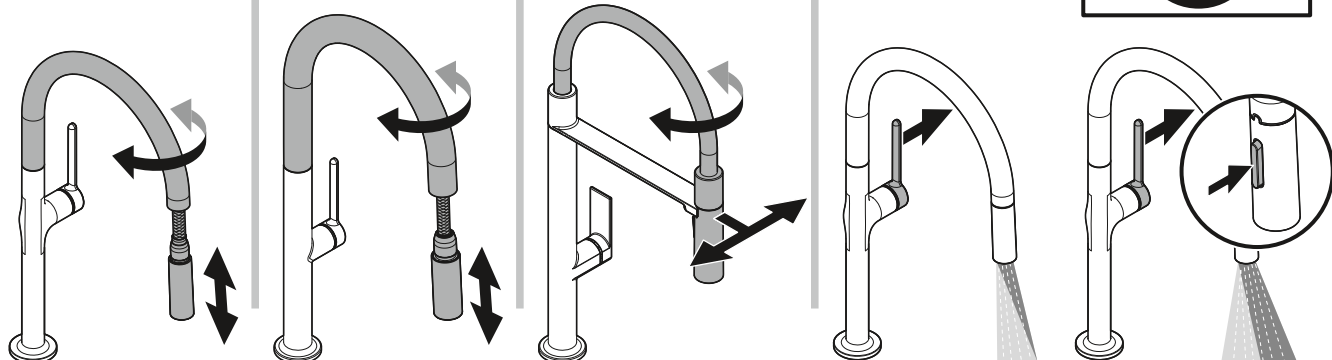
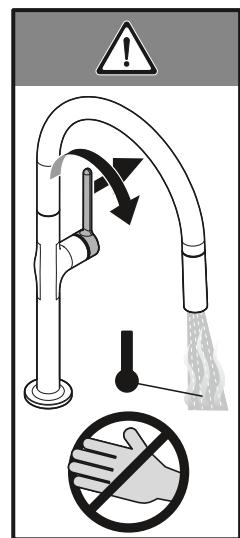
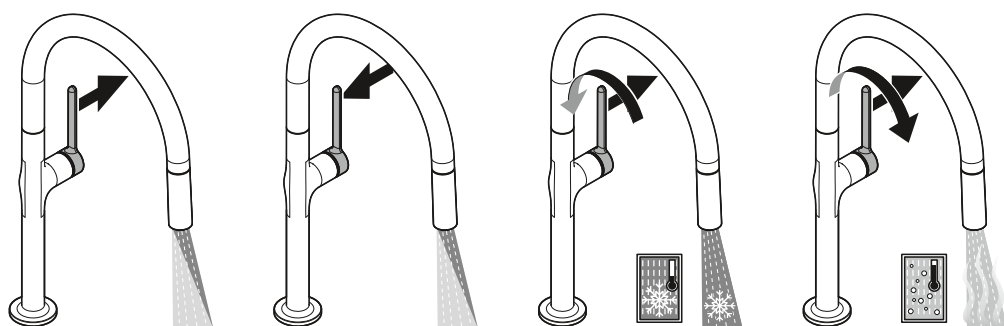
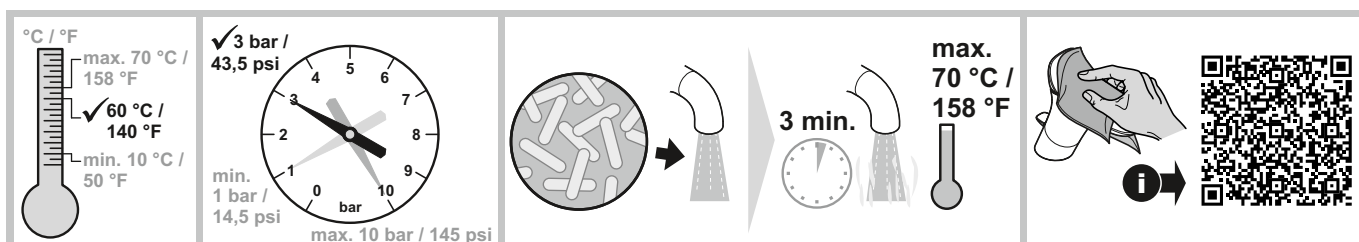
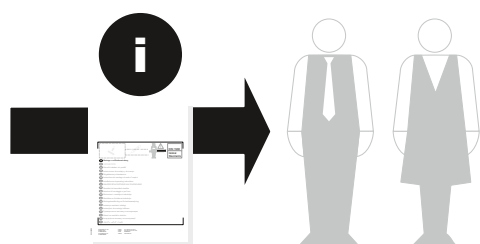


DIN EN 806
DIN EN 1717
DIN 1988
Global
Standards

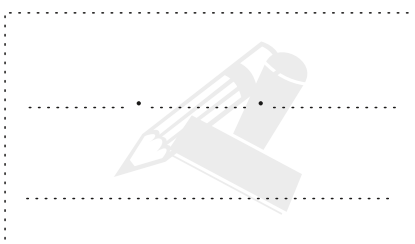

D Montage- und Bedienanleitung

CN 安装及操作指南

CZ Návod k instalaci a k použití

E Instrucciones de montaje y de manejo

EST Paigaldamine ja kasutamine

F Instructions de montage et d'utilisation

GB Installation and operating instructions

GR ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ

H Szerelési és használati utasítás

I Istruzioni di montaggio e per l'uso

LT Montavimo ir naudojimo instrukcija

LV Montāžas un lietošanas instrukcija

NL Montagehandleiding en Gebruiksaanwijzing

PL Instrukcja montażu i obsługi

RO Instrucțiuni de montaj și utilizare


RUS Руководство по монтажу и эксплуатации


SK Návod na montáž a obsluhu

SLO Navodila za montažo in uporabo


UA Інструкція по монтажу та експлуатації

UAE تعليمات التركيب والتشغيل

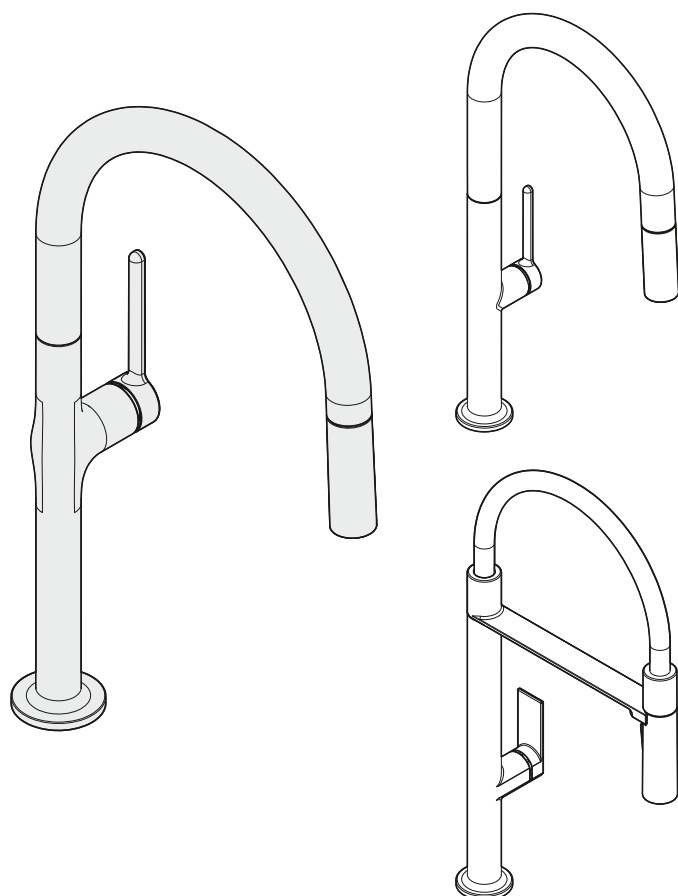


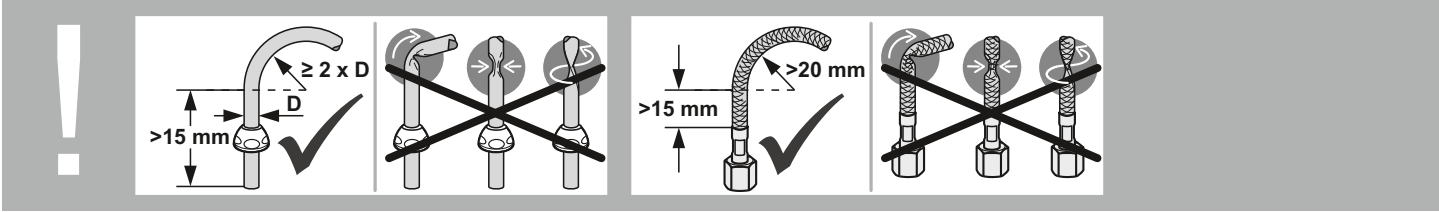


1.

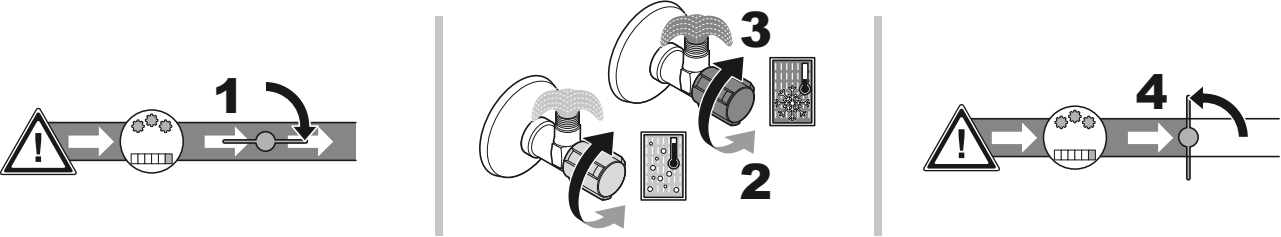

2.

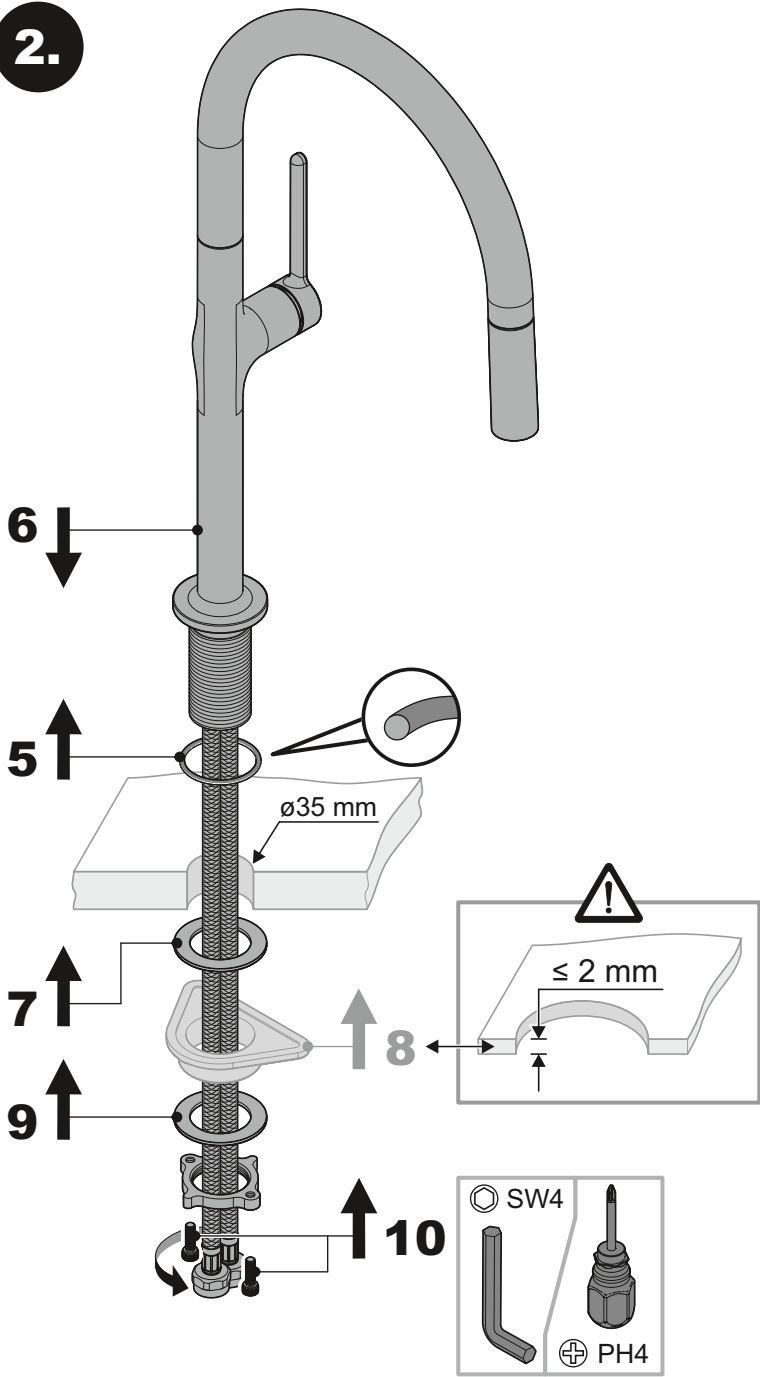

3.

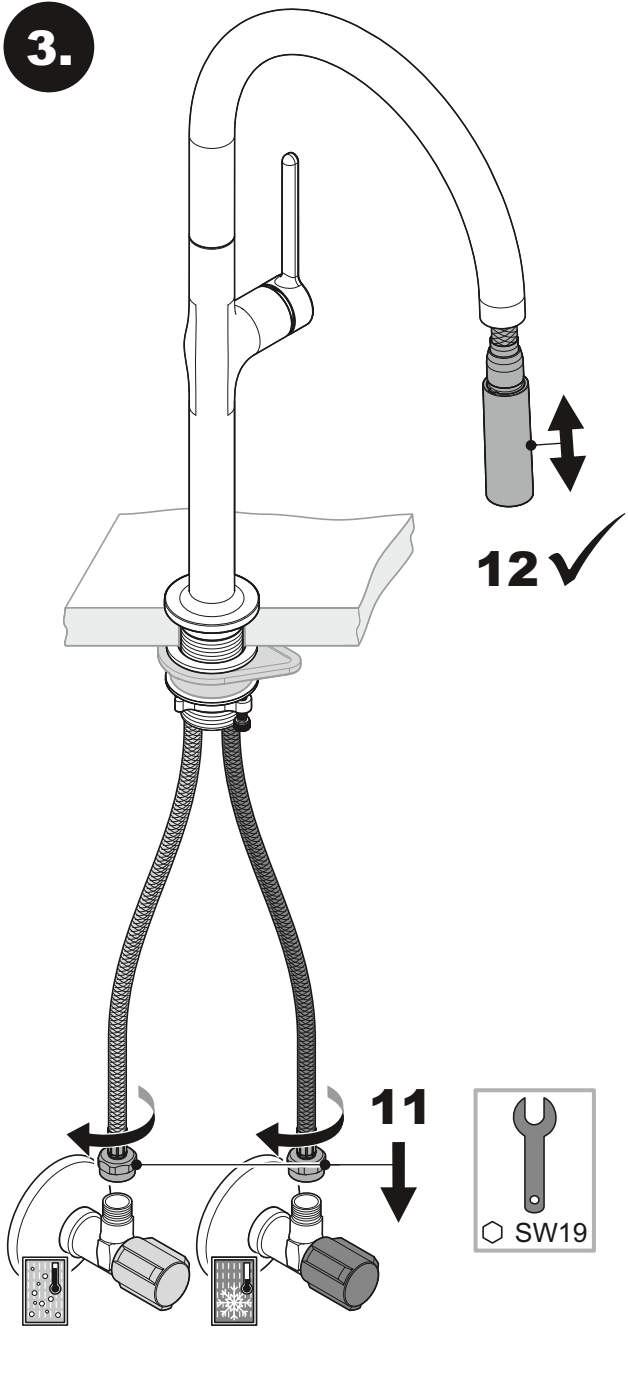

4.

