





Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb
 / Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu


XX = AA, GN, ...

Pos.	Part No.
1	A 861 397 NU
2	A 9617 93 NU
3	A 861 422 NU
4	A 861 433 XX
5	A 861 424 XX
6	A 861 429 XX
7	A 861 431 XX
	A 7378..
	A 861 432 XX
	A 7379..
8	A 962 708 NU
9	A 861 428 NU
10	A 861 434 XX

A 7378..
A 7379..

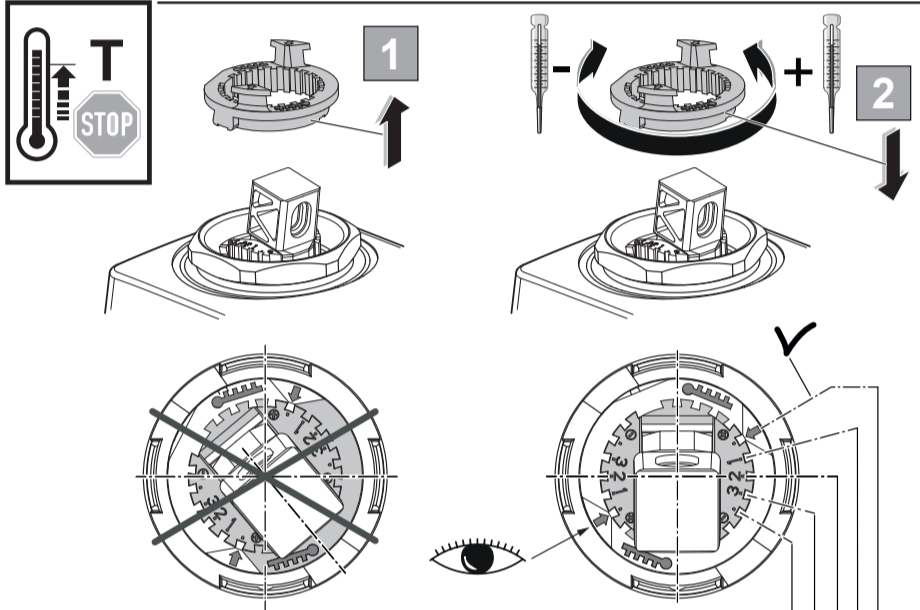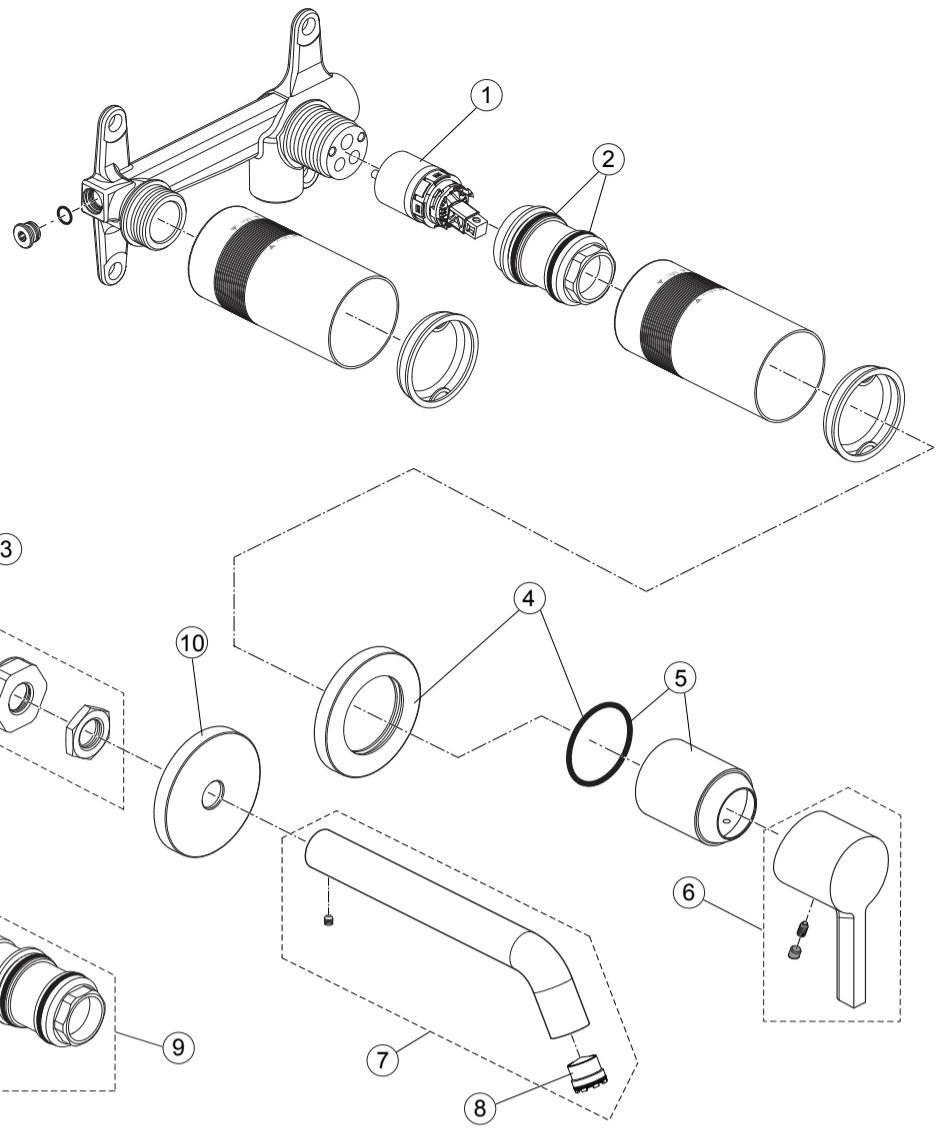

P	°C	°C	4	3	2	1	0
			°C	°C	°C	°C	°C
50°C	15°C	27	33	41	48	50	
65°C	15°C	33	42	53	63	65	
85°C	15°C	41	53	68	83	85	

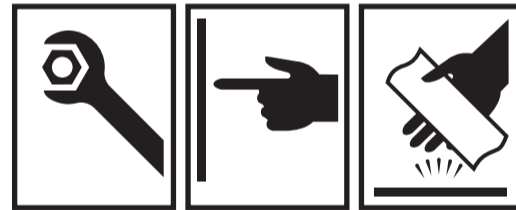


Ideal Standard


Joy

A 7378 .. A7379 ..


0920 / A 868 660

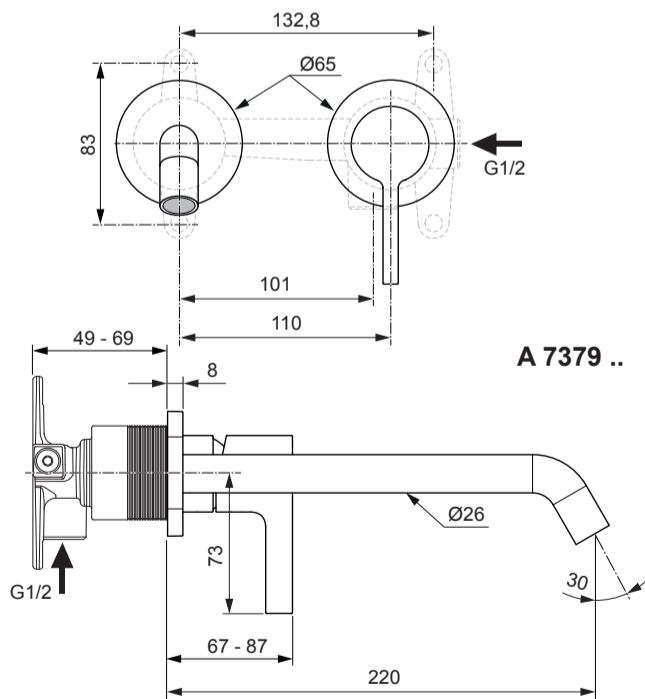

A 7379 ..

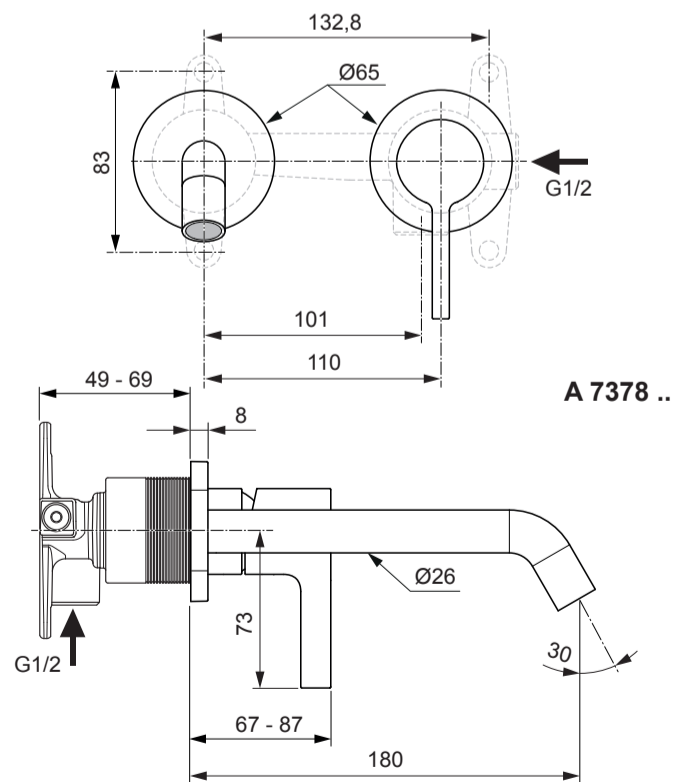

A 7378 ..

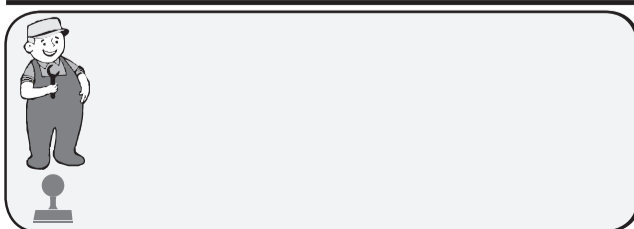

Ideal Standard International NV
 Corporate Village - Gent Building
 Da Vincilaan 2
 1935 Zaventem
 Belgium

www.idealstandardinternational.com

