
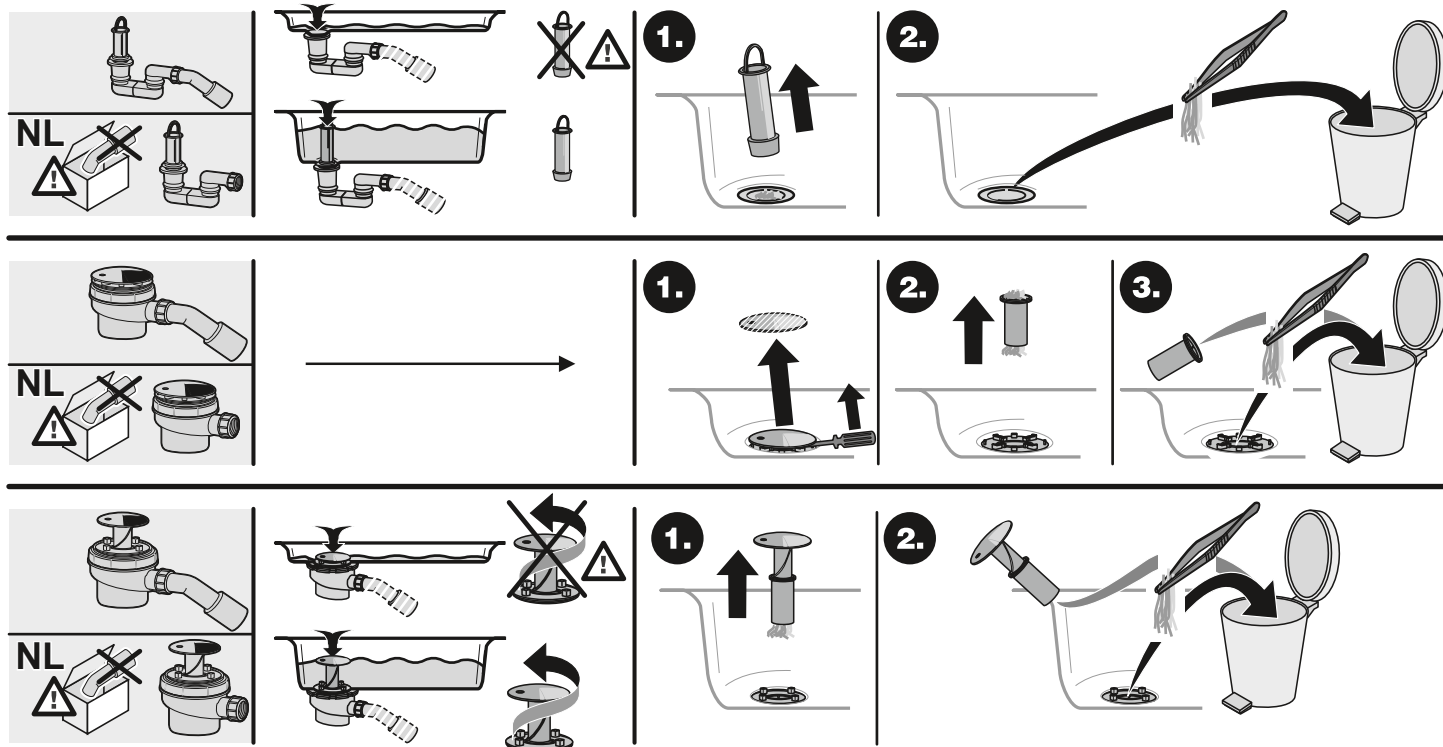


- ⓓ Montage- und Bedienanleitung
- ⒸⓃ 安装及操作指南
- ⒸⓏ Návod k instalaci a k použití
- Ⓔ Instrucciones de montaje y de manejo
- Ⓕ Instructions de montage et mode d'emploi
- ⒼⒷ Installation and operating instructions
- ⒼⓇ ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
- Ⓕ Szerelési és használati utasítás
- Ⓘ Istruzioni di montaggio e per l'uso
- ⓃⓁ Montagehandleiding en Gebruiksaanwijzing
- ⓅⓁ Instrukcja montażu i obsługi
- Ⓡⓞ Instrucțiuni de montaj și utilizare
- Ⓡⓞ Руководство по монтажу и эксплуатации
- ⓈⓀ Návod na montáž a obsluhu

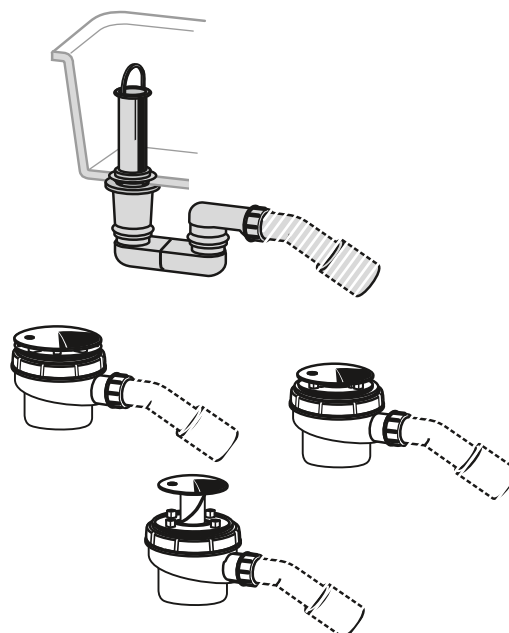

KLUDI
830288

3.

Diagram 3 illustrates the assembly of the 50 mm connection. It shows the removal of the cap and the installation of a new cap. A warning box shows that the cap should not be used on a 40 mm pipe. A callout shows the cap being cut with a saw and then removed. The main diagram shows the cap being removed from the 50 mm pipe and a new cap being installed.

ø40 mm

ø50 mm

8

7