

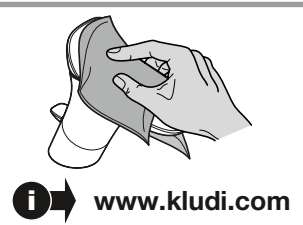
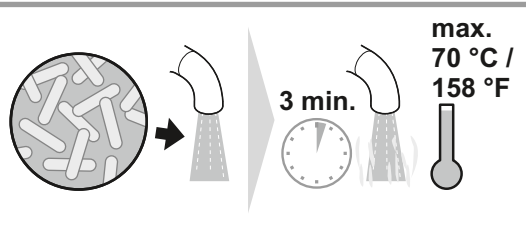
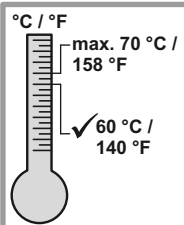
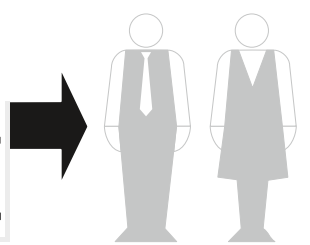
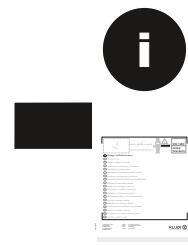



DIN EN 806  
DIN EN 1717  
DIN 1988  
Global  
Standards

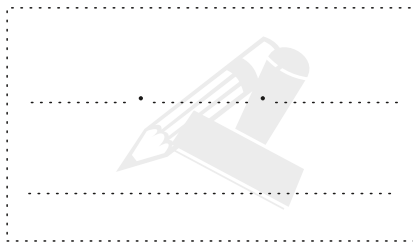


- ① Montage- und Bedienanleitung
- ② 安装及操作指南
- ③ Návod k instalaci a k použití
- ④ Instrucciones de montaje y de manejo
- ⑤ Instructions de montage et mode d'emploi
- ⑥ Installation and operating instructions
- ⑦ ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
- ⑧ Szerelési és használati utasítás
- ⑨ Istruzioni di montaggio e per l'uso
- ⑩ Montagehandleiding en Gebruiksaanwijzing
- ⑪ Instrukcja montażu i obsługi
- ⑫ Instrucțiuni de montaj și utilizare
- ⑬ Руководство по монтажу и эксплуатации
- ⑭ Návod na montáž a obsluhu

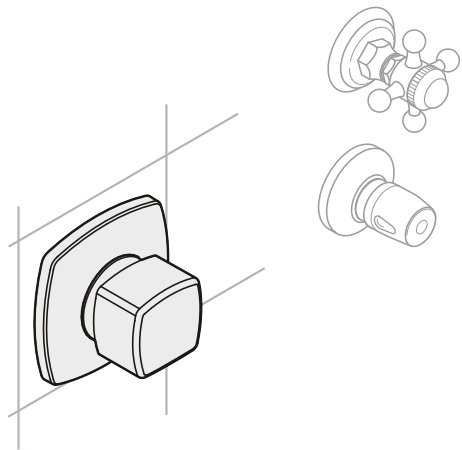

1.

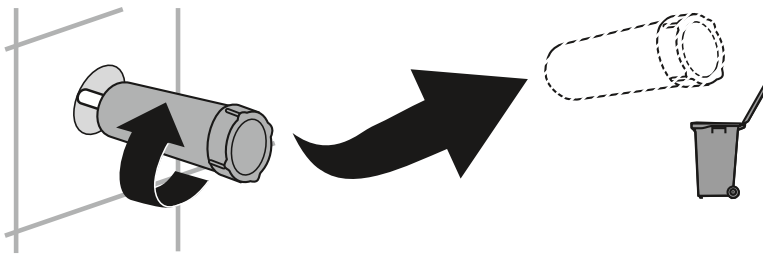

2.

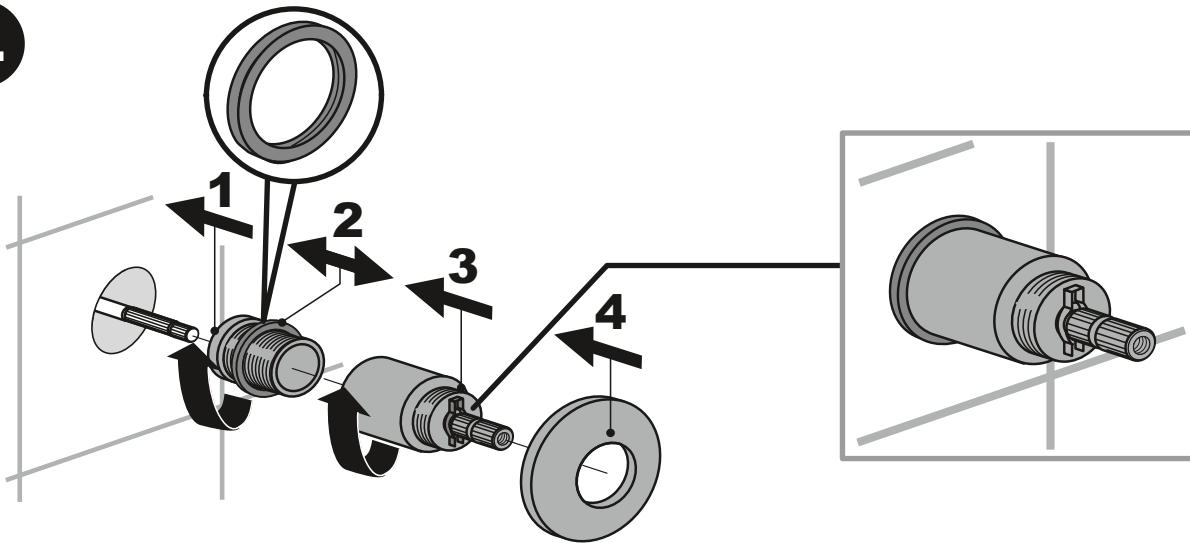

3.

